

# DASHBOARD WARNING LIGHTS QUICK GUIDE

## BRAKES



There is an issue with your vehicle's braking system. The parking brake is engaged or your brake pads are worn.

#### **TYPICAL LIFESPAN**

Replace brake pads every 10,000 - 20,000 miles to maintain your breaking system.

## WHAT TO DO

1. Check if your parking brake is engaged. 2. If the light still appears, contact Big Chief Tire to troubleshoot your braking system or replace your braking pads.

## **COOLANT TEMPATURE**



Your vehicle's engine may be overheating due to low coolant levels or a damaged radiator.

### **TYPICAL LIFESPAN**

Replace coolant and flush your radiator every 30,000 miles to avoid overheating.

## WHAT TO DO

1. Pull over to a safe location and turn your vehicle off to avoid engine overheating.

2. Visit Big Chief Tire immediately to diagnose the cause and assess your radiator and coolant levels.

## **ENGINE TEMPATURE**

Your vehicle's engine is overheating. Can be due to low coolant levels, a damaged cooling fan, or other engine problems.

#### **TYPICAL LIFESPAN**

Replace coolant and flush your car's radiator every 30.000 miles to avoid overheating.

#### WHAT TO DO

1. Pull over to a safe area and turn off your vehicle. 2. Allow your engine to cool at least 20 minutes, then check your vehicle's coolant level. 3. Contact Big Chief Tire to assess your engine or replenish your coolant.

ENGINE

Your vehicle has low oil pressure. Can be caused by low oil levels. dirty oil. or an oil leak.

#### **TYPICAL LIFESPAN**

**OIL PRESSURE** 

Replace oil every 6 months or 10.000 - 15.000 miles.

#### WHAT TO DO

1. Pull over to a safe area and turn off your vehicle. 2. Check your oil levels and look for obvious signs

of an oil leak.

3. Contact Big Chief Tire to assess and change vour oil.

## **BATTERY ALERT**



Your vehicle's charging system may have a damaged or loose battery cable or an electrical fault.

#### **TYPICAL LIFESPAN**

Reputable batteries last 3 to 4 years and often have warranties. Battery connection points can wear out between 50.000 - 100.000 miles.

## WHAT TO DO

1. Jump start your car if dead.

2. A full diagnostic is recommended as other electrical components may also need replacement. 3. Bring the vehicle straight to Big Chief Tire for new battery cables, battery replacement or a new alternator.

#### **POWER STEERING**



A problem has occurred with your vehicle's power steering system. Could be due to a hose leak/low levels of power steering fluid.

#### **TYPICAL LIFESPAN**

Flush power steering fluid every 40,000 - 80,000 miles to maintain your power steering system and prevent leaks.

#### WHAT TO DO

1. Pull over to a safe area. Check your vehicle's power steering fluid levels within your engine.

2. Refill the liquid if necessary.

3. Make an appointment with Big Chief Tire to check for system leaks.

## **TIRE PRESSURE (TPMS)**



One or more of your vehicle's tires has low pressure or pressure that is too high.

#### TYPICAL LIFESPAN

Your tires lose around one PSI per month. Monitor tire pressure at least once a month to maintain proper air levels.

#### WHAT TO DO

1. Pull over to a safe area and look for flat or leaking tires.

2. Check your tire pressure with a gauge and add air where necessary.

3. Contact Big Chief Tire for help inflating or deflating your tires.

## TRANSMISSION TEMPATURE



Your vehicle's transmission is overheating or your transmission fluid is too hot. Can be due to low transmission fluid levels, worn transmission parts, or coolant leaks.

#### **TYPICAL LIFESPAN**

Replace transmission fluid every 30,000 - 60,000 miles to increase your transmission's lifespan.

#### WHAT TO DO

1. Pull over to a safe area and turn off your vehicle.

- 2. Allow your car and its transmission to cool off.
- 3. Visit Big Chief Tire to flush your transmission fluid, assess your transmission parts, and check for coolant leaks.

## STEERING WHEEL LOCK



Your steering wheel has been locked and cannot be turned. Usually engaged to protect your car from theft.

#### **TYPICAL LIFESPAN**

Service your vehicle at least once a year or every 12,000 miles to keep sensors and systems operating effectively.

#### WHAT TO DO

1. Unlock your steering wheel by turning the wheel back and forth while turning your key in the ignition.

2. If the warning light still appears, schedule an appointment with Big Chief Tire to diagnose issues with your steering or suspension system.

5444 Normandy Blvd., Jacksonville, FL 32205 904-786-0721

6015 Blanding Blvd., Jacksonville, FL 32244 904-771-3442

5639 Philips Hwy., Jacksonville, FL 32207 904-737-2544

11220 Lem Turner Rd., Jacksonville, FL 32218 904-765-5531

**BIGCHEIFTIRE.COM** 




#### WHAT TO DO

1. Ensure the gas cap is tightened.

2. If the warning light is red and/or flashing, this indicates a serious problem.

engine assessed as soon as possible.

## **TRACTION CONTROL**

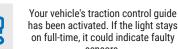

has been activated. If the light stays on full-time, it could indicate faulty sensors.

#### **TYPICAL LIFESPAN**

Activates each time your vehicle engages extra traction to avoid sliding on a slippery road.

#### WHAT TO DO

1. If the light appears for 2-3 seconds during inclement conditions, your vehicle is operating safely. No further action is necessary.

2. If the light stays on, make an appointment with Big Chief Tire to have your wheel sensors checked.

gas cap to a faulty catalytic converter or an overheating engine.

Many possible issues - from a loose

### **TYPICAL LIFESPAN**

Service your vehicle once a year or every 12,000 mi to keep systems operating effectively. Schedule an oil change every 6 months to prevent engine strain.

3. Pull over and contact Big Chief Tire to have your